



Switch Panel

INSTALLATION INSTRUCTIONS

Allstar Performance Switch Panel Model 80146 and 80164

- Connect Red wire from ignition switch to a "+" positive battery connection, or the switched side of the battery disconnect switch.
- Connect the Red wire from the start button to the starter solenoid.
- Connect the Black wire from the ignition switch to the "+" side of the coil.
- Connect the White wire from the accessory to the "+" positive side of accessory to be used. (i.e. water pump, cooling fan, etc.)
- Loose indicator light wire must be grounded.

To protect wires on the switch panel from the elements, seal connections on the back of the panel with a good quality silicone.

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098

Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com